







ASSEMBLY INSTRUCTIONS - TWIN CONTEMPO BED

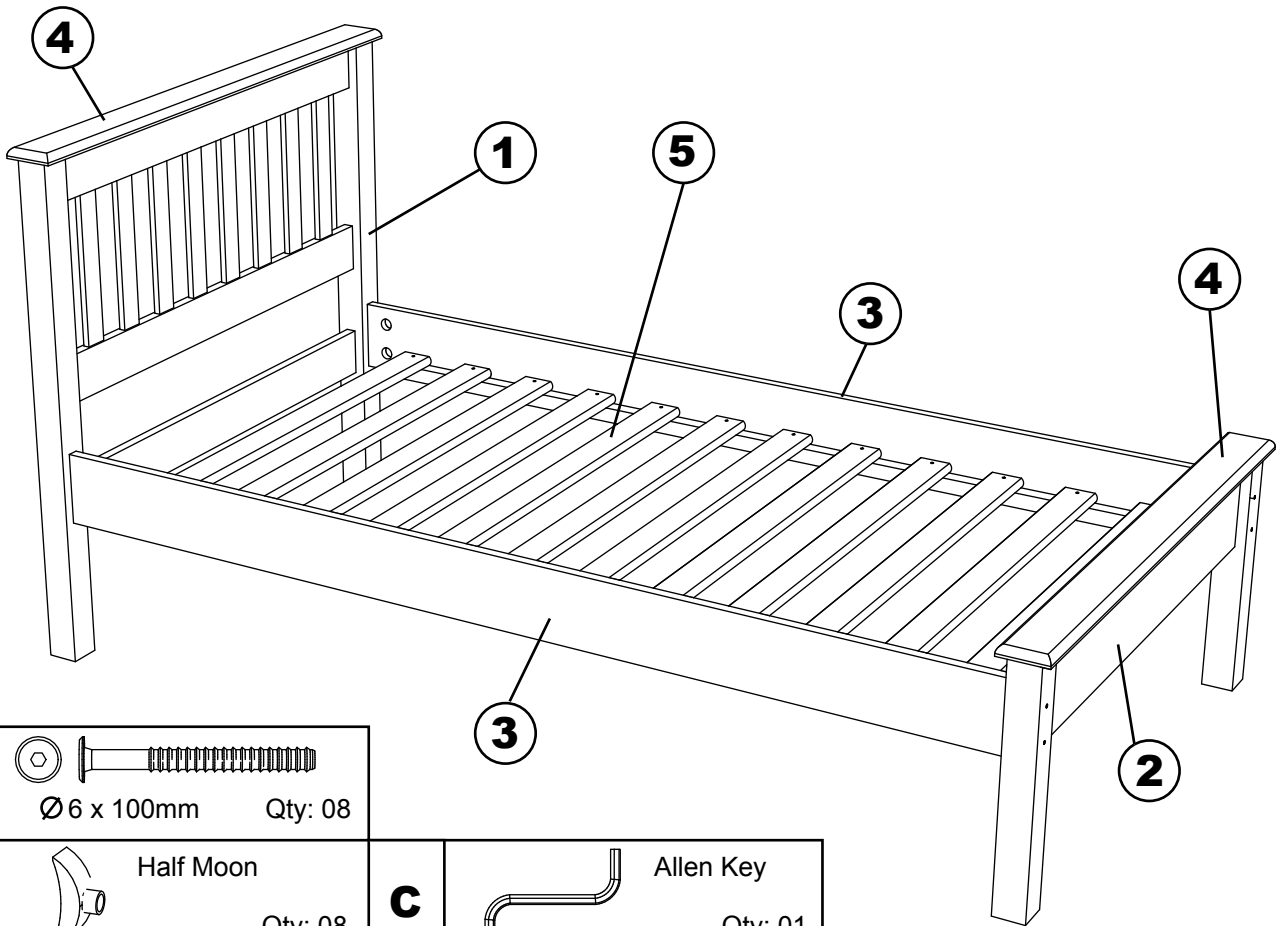



A  
 Ø6 x 100mm Qty: 08

B  Half Moon
 Qty: 08


C  Allen Key
 Qty: 01



D 
 Ø10 x 40mm Qty: 08

E 
 Ø4 x 30mm Qty: 30

F  Spacer
 Qty: 02


Step: 1

D 
 Ø10 x 40mm Qty: 04

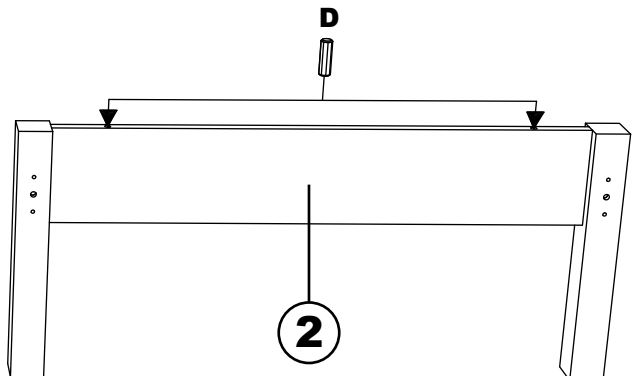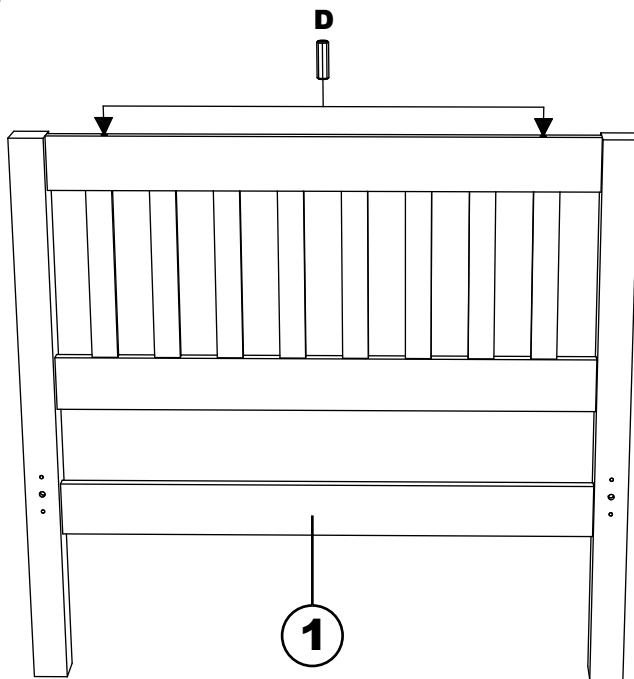



Step: 2

E




Ø 4 x 30mm

Qty: 06

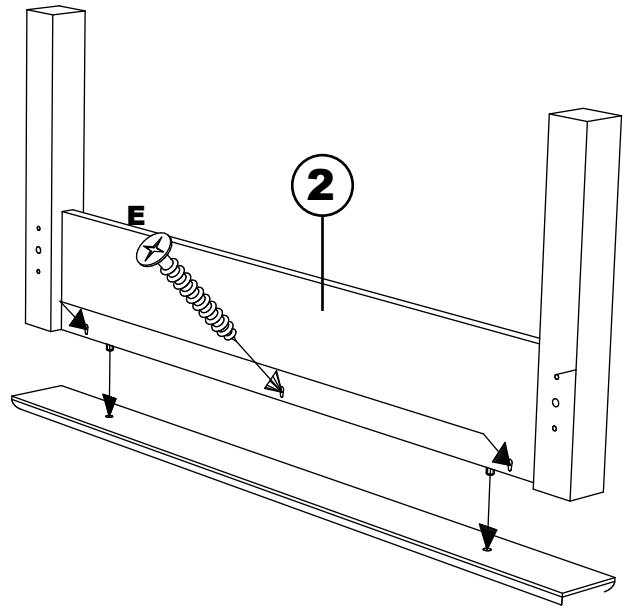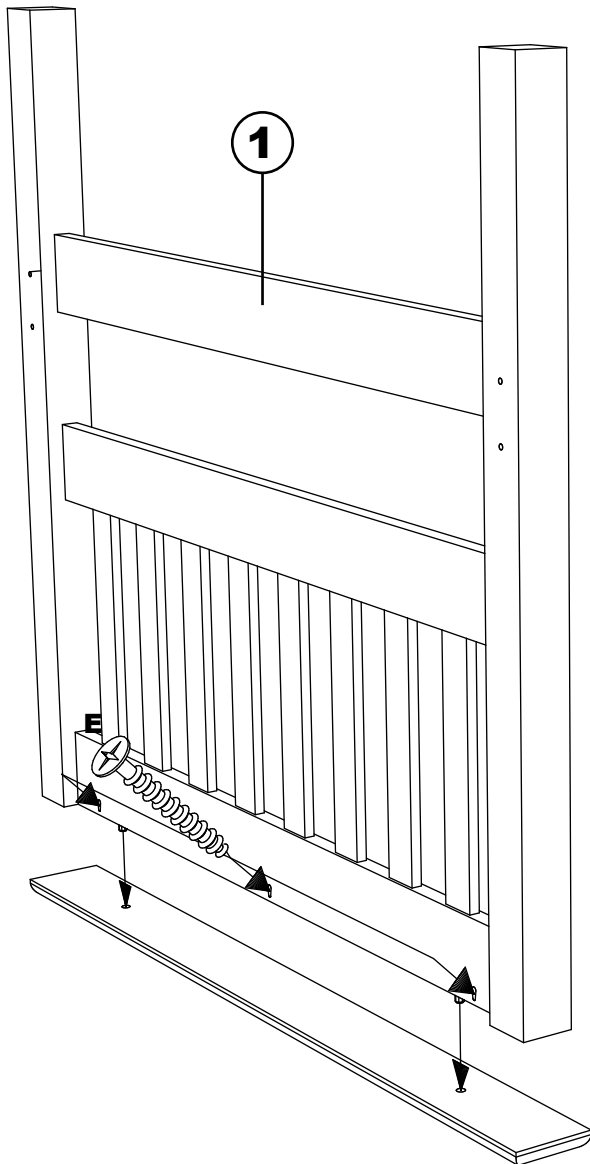


Step: 3

D




Ø 10 x 40mm


Qty: 04

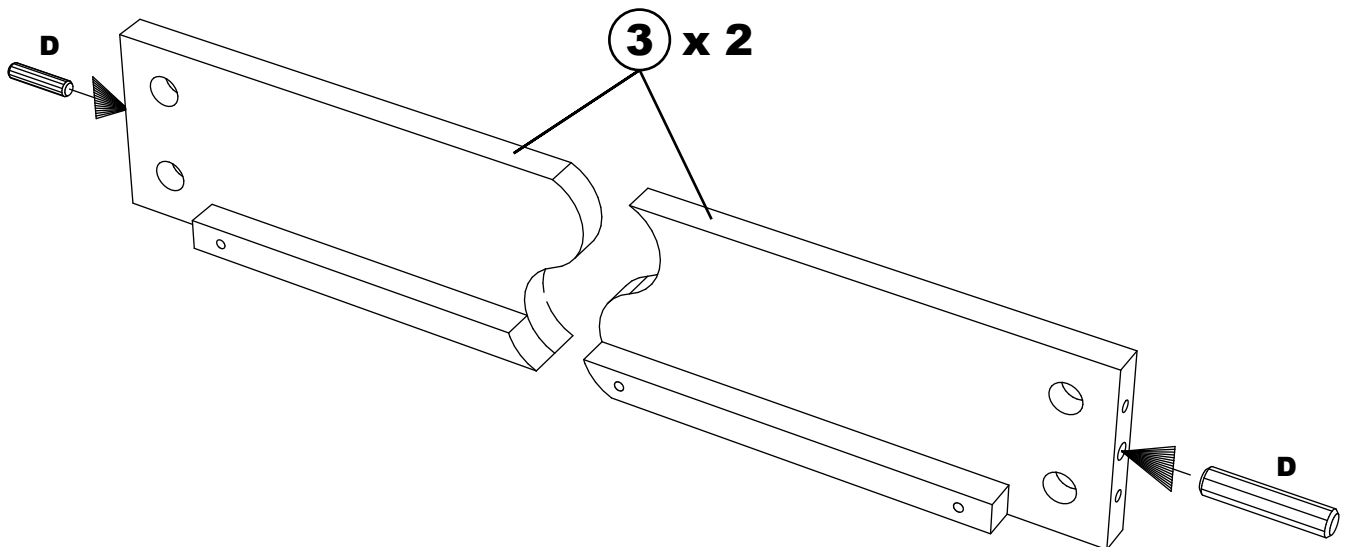




Step: 4

4

A  Qty: 08


B  Qty: 08


C  Qty: 01

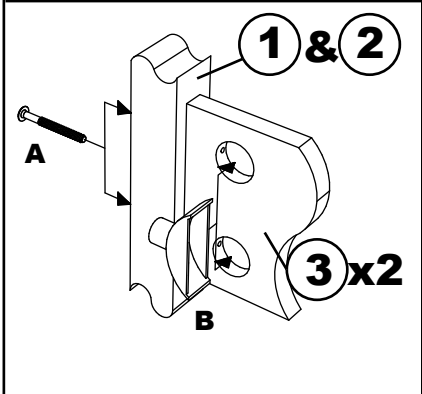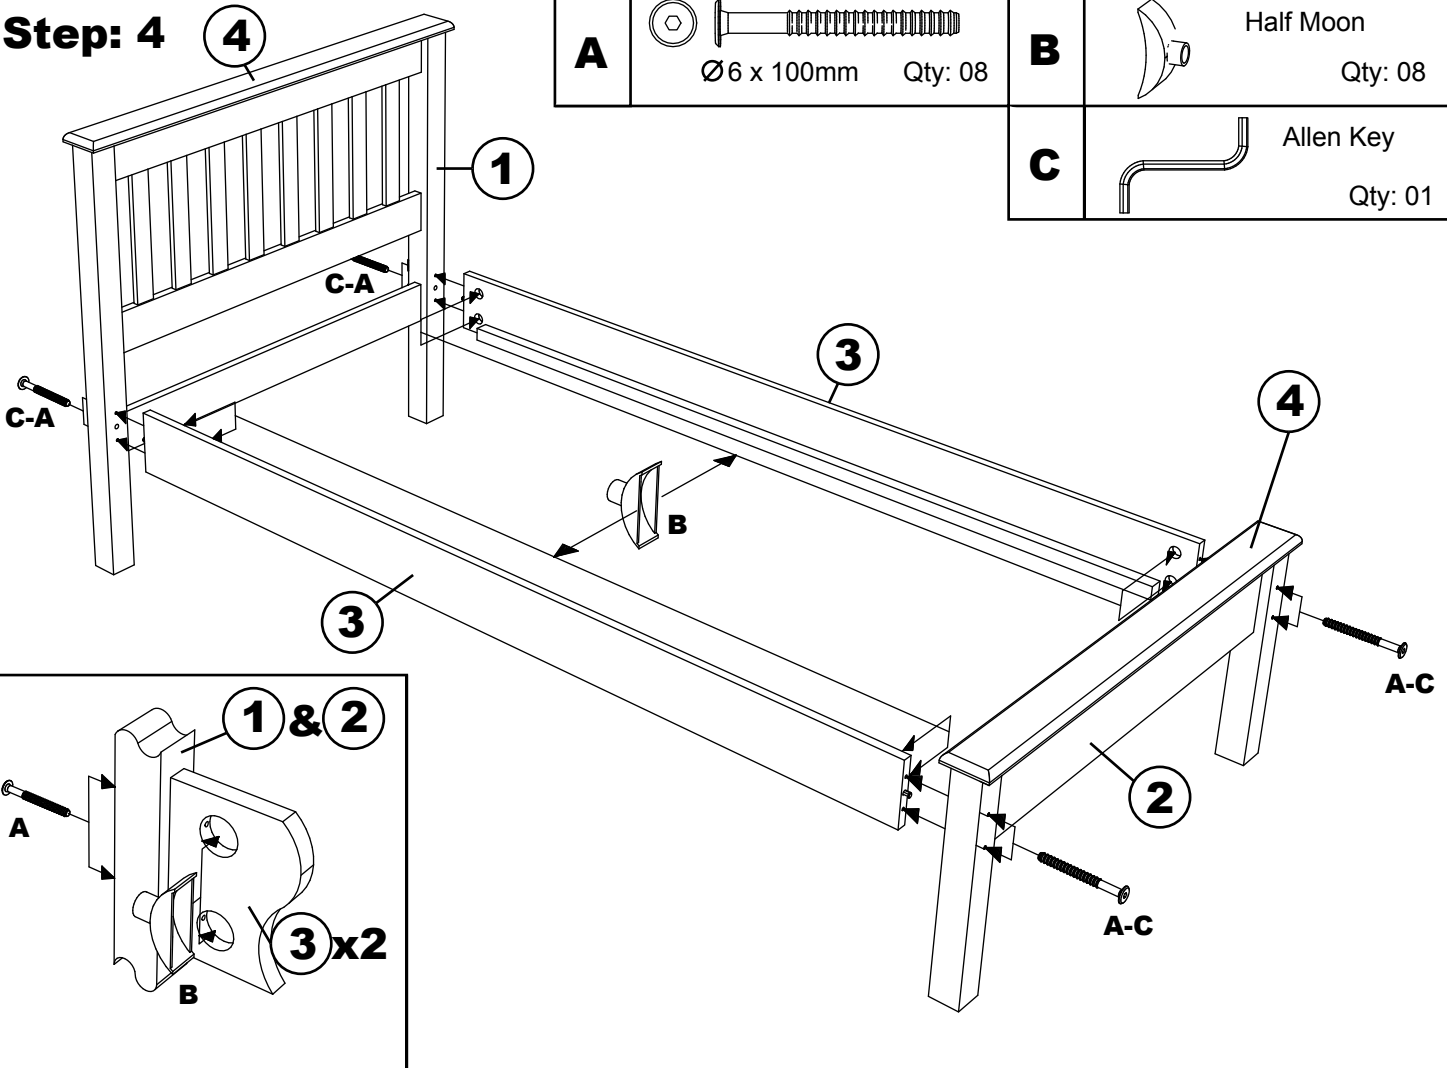

Step: 5

4

E  Qty: 24

F  Qty: 02

